Carcomm Navigation Cradle

CNM-174 TomTom GO x40 / GO 9000 - TomTom LINK 300

carcomm Mobile Solutions

Introduction

This installation manual has been prepared to provide the basic information needed to install the Carcomm Navigation Cradle. This manual is not intended to be definitive, because there are different models and types of vehicles which will require different installation work. The information given is for general guidance only.

The terms of warranty demand that this mobile navigation cradle is installed by an experienced installer. An end-user should never attempt to install this mobile navigation cradle without professional assistance as the installation requires special tools and knowledge.

Note: Thoroughly read the manual before beginning the installation procedure.

WARNINGS

1. Ensure that the vehicle's battery is disconnected before you start the installation procedure and that it remains disconnected during the procedure.
2. Do not smoke or use open flames when working near the vehicle's fuel system.
3. Ensure that the vehicle's electrical cables, hydraulic lines, fuel lines and safety equipment are not damaged during the installation.
4. Ensure that normal control and operation of the vehicle is not obstructed by the installation, particularly the brakes and steering. Ensure that airbag operation is not obstructed.
5. Electronic and other sophisticated systems (for example speed control, ABS anti-lock brake, fuel injection-, navigation- and airbag systems) are relatively immune to malfunction. However, should you experience false operation of these systems or are in any doubt whatsoever as to their functionality, please consult the vehicle's dealer.
6. The mobile navigation cradle is suitable for use only in vehicles with 12 / 24V, negative grounding. Use on other supply voltages or alternative polarity will damage the equipment.
7. The TomTom should not be left switched on for extended periods without running the vehicle's engine. Failure to comply could drain the vehicle's battery.

Compatible devices

TomTom GO 540 / 740 / 940
TomTom GO 9000
TomTom LINK 300

Contents

Before starting the installation of the Mobile Navigation Cradle please check if the following contents are present :

- Carcomm Navigation Cradle
- Rotating Swivel
- Fuse
- Screw sets
- Manual

Installation

<u>See the diagram on the backside for an overview.</u>

1. Mount the rotating swivel against a flat surface on the dashboard or a vehicle specific mount like a Carcomm Safety-Mount, Dashmount or other mounts. Use the included self-tapping screws for this. Use the template on the right to mark up the holes if this is necessary.
2. Mount the navigation cradle against the rotating swivel using the included nuts and bolts.
3. To adjust the angle of the cradle while using the rotating swivel you can use the big screw in the middle of the swivel by accessing it via the hole in the middle of the cradle.
4. Connect the RED wire to the ignition controlled 12V /24V power supply of the vehicle using the included in-line fuse.
5. Connect the BLACK wire to the vehicle's GROUND / GND.
5. The cradle is now ready to use.

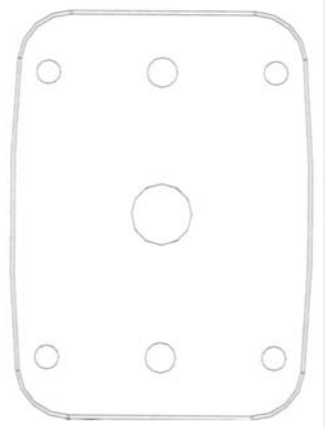

© Copyright 2008 - Carcomm International BV. Subject to change without previous notice. All used brandnames are owned by their respective owners

Carcomm Navigation Cradle

CNM-174 TomTom GO x40 / GO 9000 - TomTom LINK 300

Installation diagram

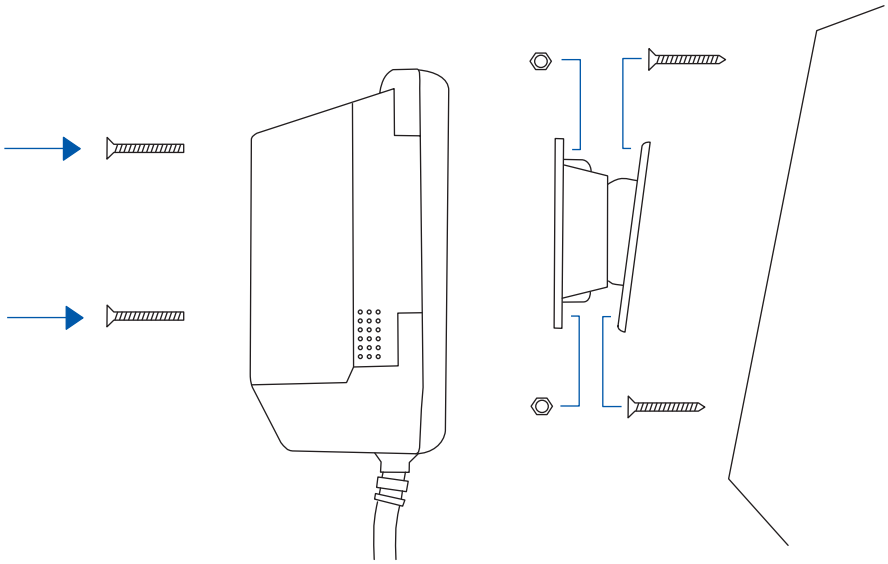

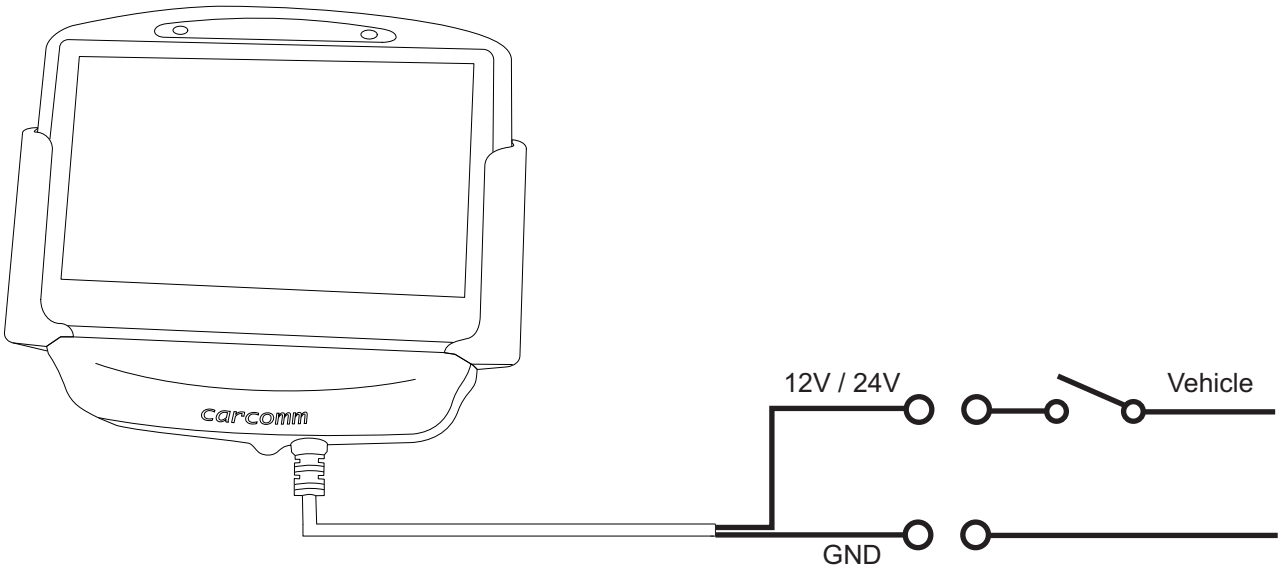

© Copyright 2008 - Carcomm International BV. Subject to change without previous notice. All used brandnames are owned by their respective owners